

RESET SIO

VRF	VIN
AGD	AGND
(5)	T_HKP
(7)	(8)
(9)	(10)
(11)	(12)
(13)	D_TRAP
D_IRQ	P_DSBL*
(17)	W_DSBL*
POR*	VCC
(21)	X1
X2	HOLD
HLDA	CLK0
C_RD	SOD
SID	C_RESI*
RDY	IDM*
C_TRP	RST75
R65	S1
RD*	WR*
R55	C_INTR
INTA*	ALE
S0	A15
AD0	AD1
AD2	A14
A13	A12
AD3	AD4
A10	A11
A9	A8
AD5	AD6
AD7	GND
(61)	(62)
(A)	(B)

+5V INTR TRIG
GND +5V
H2